

Manual Video Grabber

 


DIGITNOW!

EN - DE - SP - IT - FR

Your Package Contains:

1.

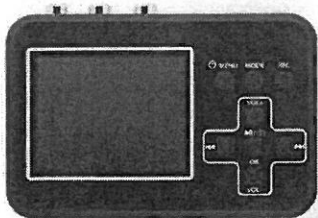


2.




3.



 
4.

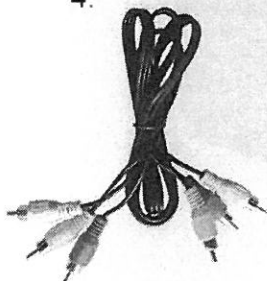

 5.

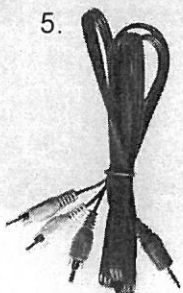

 6.

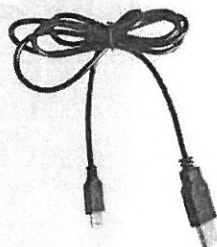

1. Video Grabber
2. 5 V power adapter
3. HDMI cable
4. RCA-cable
5. AV-cable
6. USB Data/power Cable
7. Manual
8. 4G TF Card inside

8.



7.



2

Safety Information:

1. Carefully read and follow the manufacturer's instructions in this manual and save the manual for future reference.
2. Clean with a dry cloth only.
3. Do not use the product close to any heat source.
4. Unplug the product from the wall socket during lightning storms or when it is not being used.
5. Do not expose the product to moisture, as this poses a risk of fire or electrical shock.
6. If the product is damaged, please refer all repairs to qualified personnel.

N.B.! Do not connect the audio output from a high-power amplifier to the product's audio input.

N.B.! Prior to the first use charge for 5 hours. When the battery is completely depleted, it will need approximately 5 hours for a full charge.

Use:

The Video Grabber allows you to record high-quality video material from a range of video sources, such as Video8, Hi8, SVHS, VHS and DVD. You can also take snapshots while you record video material.

The memory card saves your recording in AVI format. File size is 13-15 Mb per minute.

 
Any segments you record that are more than two hours long will be divided into parts.

A serial number (0001, 0002 etc.) is automatically assigned as the file name. The files can then be transferred to a computer and be renamed.


Charging the Battery:

The built-in battery can be charged in two ways:

A Via the power mains

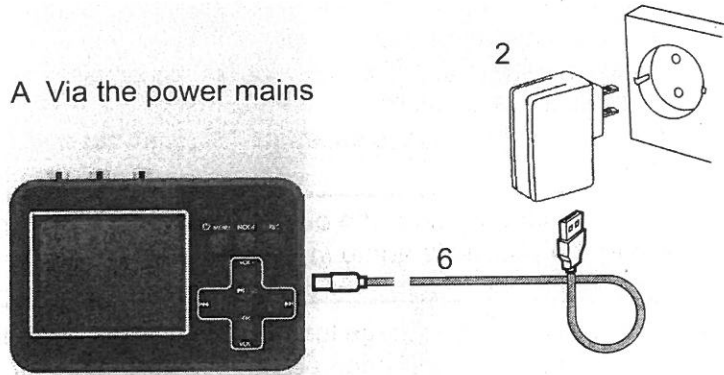

B Via the computer's USB port

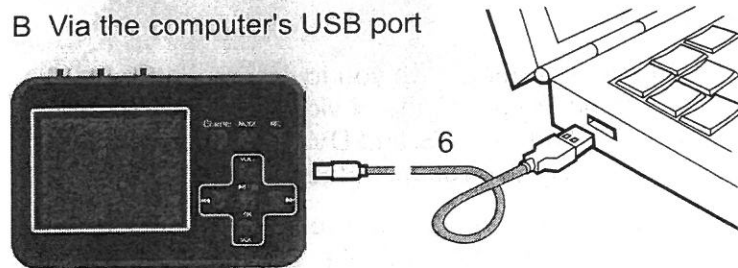 


Charge your Video Grabber for at least three minutes before turning it on.

Installing the Memory Card:



TF card must be used.

 For optimal results, a memory card with speed class 10 is recommended.

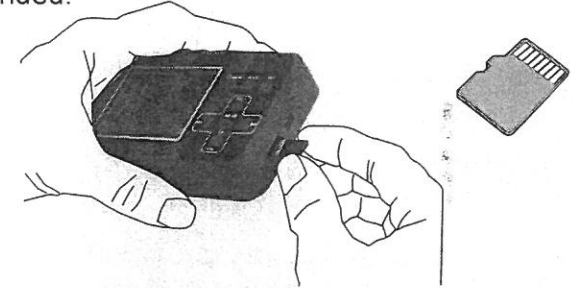


In order to remove the memory card, gently press inward and then carefully remove the card.

  
Connections

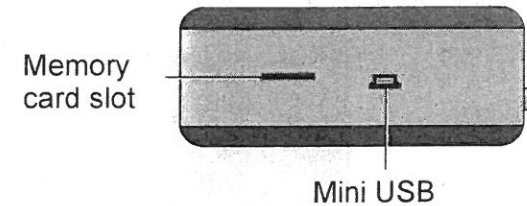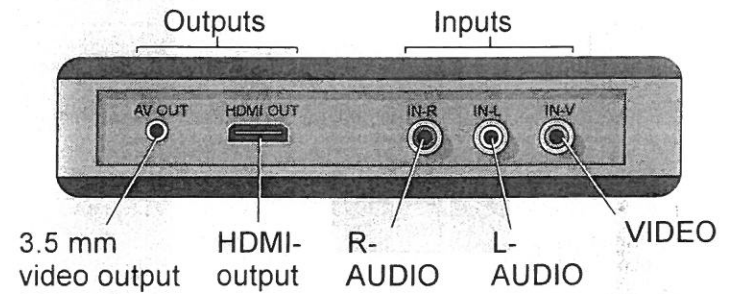


Operation:

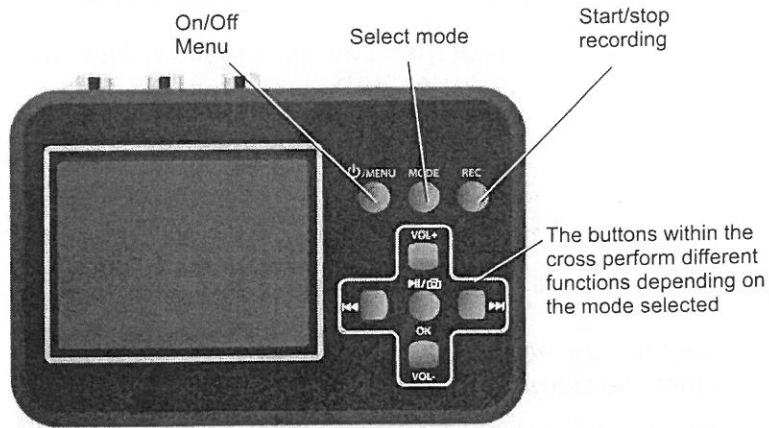 

Play mode:

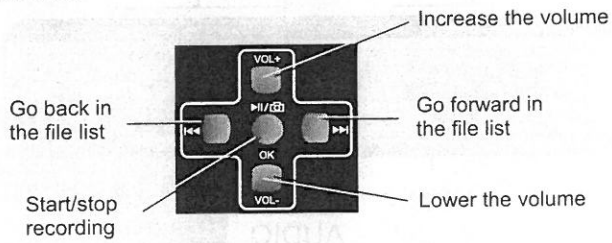 


Video recording mode:

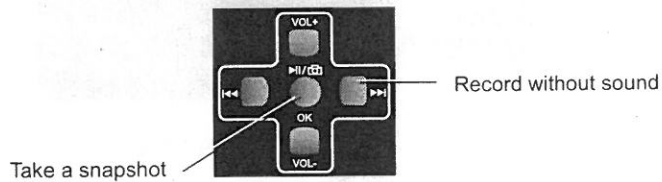 

Connecting a Video Source:

 
Connect your Video Grabber to the video source in one of the following ways:

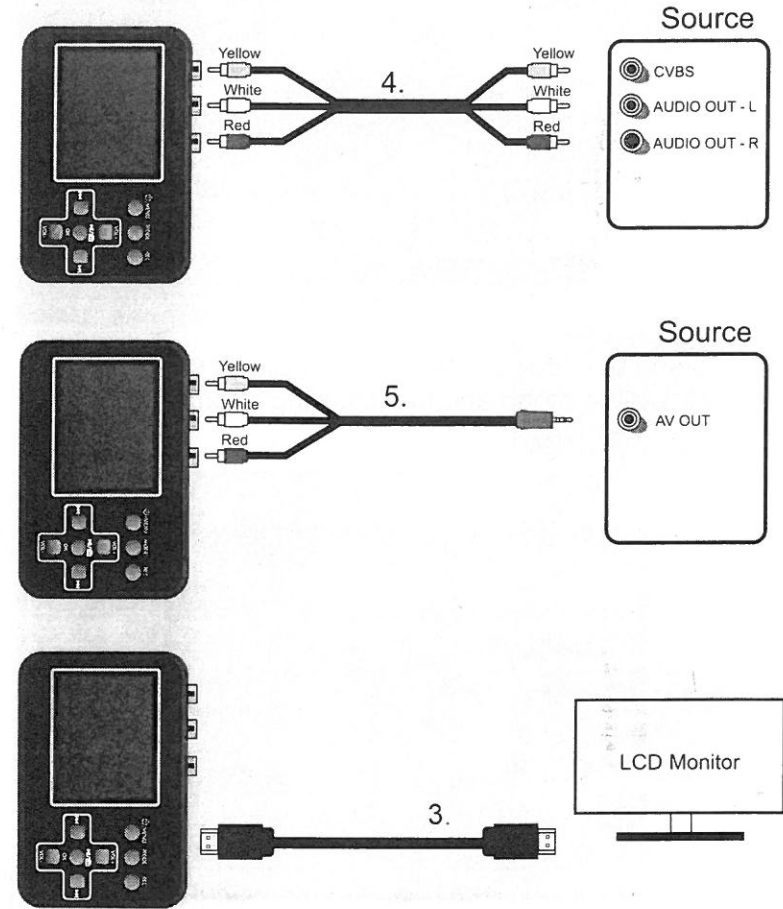


Other cables and adapters may also be used; however, such are not included with the Video Grabber.

Starting Your Video Grabber:

 Make sure that the battery is charged and that the memory card is in place. Press the On/Off Menu button for approximately three seconds.

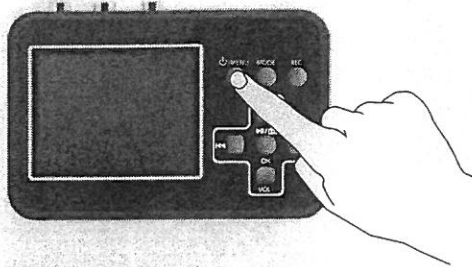

 
Upon being powered up, the Video Grabber starts off in video recording mode and the following information is shown on the display:

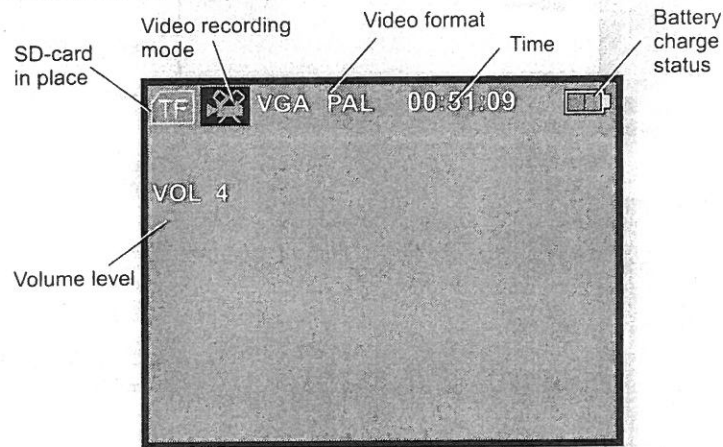




N.B.! If no memory card is in place, the message **No Card** appears on the display.

Settings in the Video Recording Mode


 
Press the **On/Off** Menu button briefly once more to gain access to the settings.

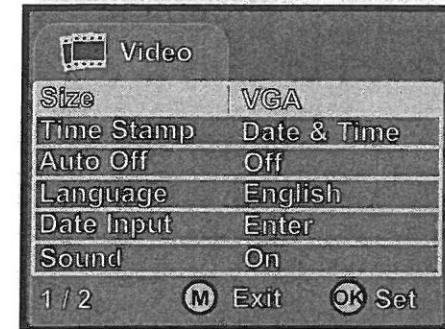

   
Press **OK** to gain access to the underlying menu.

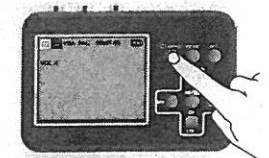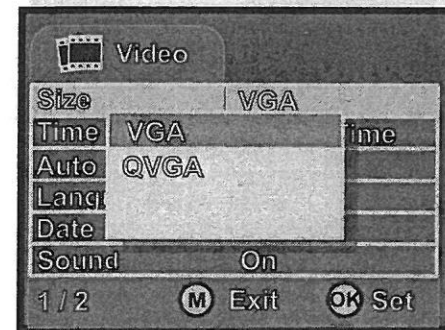

  Scroll between the various menu alternatives by using the **VOL+** and **VOL-** buttons.

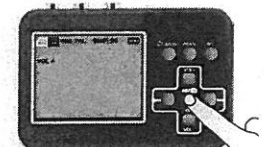


 Press **OK** to save the selected alternative.

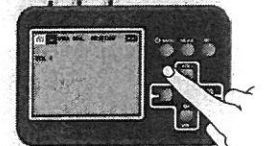


Press the **On/Off** Menu button to leave the settings mode.

 
N.B.! The selected alternative is shown in yellow in the main menus; however, it appears in blue in the underlying menus.

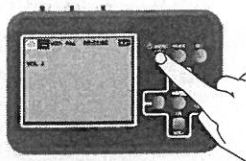

 
Using the VOL- button, scroll down to:
Date input Enter



Press OK to reveal an underlying menu.


 


 Using the VOL- button, scroll down to: Set.
Please note that the blue field is now highlighted.




Setting the Date and Time

 
 
In the video recording mode, briefly press the **On/Off Menu** button

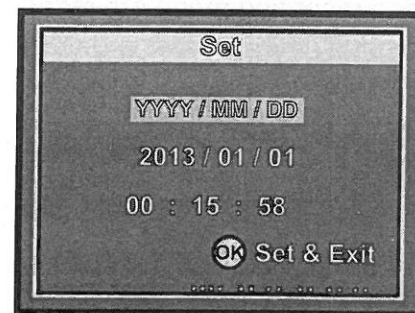

 
Using the ►► button, scroll down to the year.



  Set the correct year by using the VOL- and VOL+ buttons.

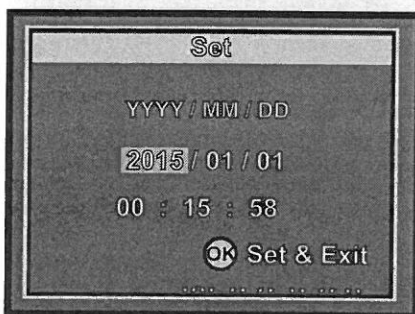

 Then use the ►► button to scroll further to the month etc.



Press OK to save the settings and return to the settings menu.

Once all the settings are made, return to the video recording mode by pressing the **On/Off Menu** button. The selected settings remain saved even if the device is switched off.

Other Settings

The other settings in the video recording menu are made in the same way as you set the time and date.

The available settings are:

Input video format (Size) VGA or QVGA

Date and time visible on the recorded film (Time Stamp)
This time can be set independently of the time set in the Vooni Video Grabber. For instance, if the video was recorded in the summer of 1996, the date can be inserted here.

Automatic shut-off (Auto off) can be set to Off or to 15, 30 or 45 minutes.

Language: Several languages can be selected.

Time and date (Date input) Refer to the previous page.

 
Sound On or Off.

Software version.

Recording:


1. Connect your Video Grabber to the video source.
2. Turn on the video source.
3. Turn on your Video Grabber
4. Press the **REC** button to begin recording.

The counter in the top right-hand corner of the screen turns red.

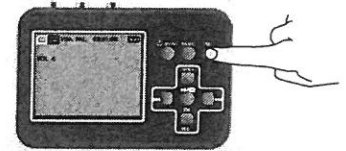

5. Press PLAY on the video source to begin playing your video. The film is now also visible on the screen on your Video Grabber. While your film is being recorded, you can do the following:

 - a. Record the film without sound.

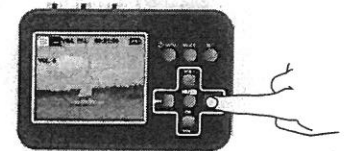

Press the **▶▶** button. Press it once more and the sound is once again recorded.

- b. Take snapshots




Press the **■|■** button. The snapshot is automatically given a serial number as its file name.

6. Press the **REC** button to stop and save the recording.

Settings in Play Mode:


 
Press the **MODE** button to select the play mode.

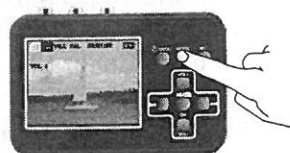

Your Video Grabber is now in play mode.





  Press the **On/Off Menu** button briefly once more to get to the settings.

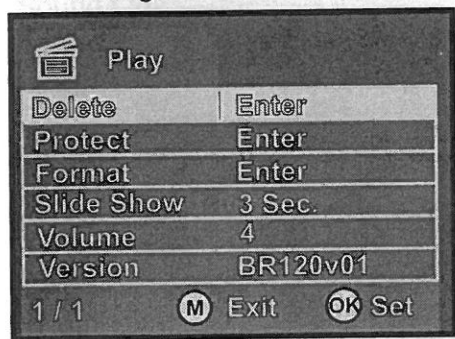


Scroll between the various menu alternatives by using the **VOL+** and **VOL-** buttons.

  Press **OK** to gain access to the underlying menu.



 Using the **VOL-** button, scroll down to your desired alternative. Please note that the blue field is now highlighted.



Press **OK** to save the settings and return to the settings menu.

The following settings can be made in play mode:

Delete removes the current film or snapshot.

Protect prevents the films from being deleted. You can select single films, all of them or select from the miniatures that are displayed. Protected files are indicated with a padlock.

Format formats the memory card and deletes all the files, even those that are protected.

Slide show presents the snapshots in the form of a slide slow.

 
Volume sets the volume level between 1 and 8.

Software version.


Playback

1. Turn on your Video Grabber
2. Use the **MODE** button to select the play mode.


Your Video Grabber is now in play mode.

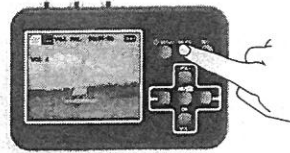

 3. Select the desired film using the **▶▶** or **◀◀** buttons.
4. Press **OK** to play the film.



 
You can zoom in and out on snapshots in several steps by pressing the **OK** or **VOL+** button.



Pressing the **VOL-** button will zoom back and ultimately data about the image file are shown.

Showing Recordings on TV

 You can connect your Video Grabber to a TV receiver via the AV cable (5) or by using an HDMI cable

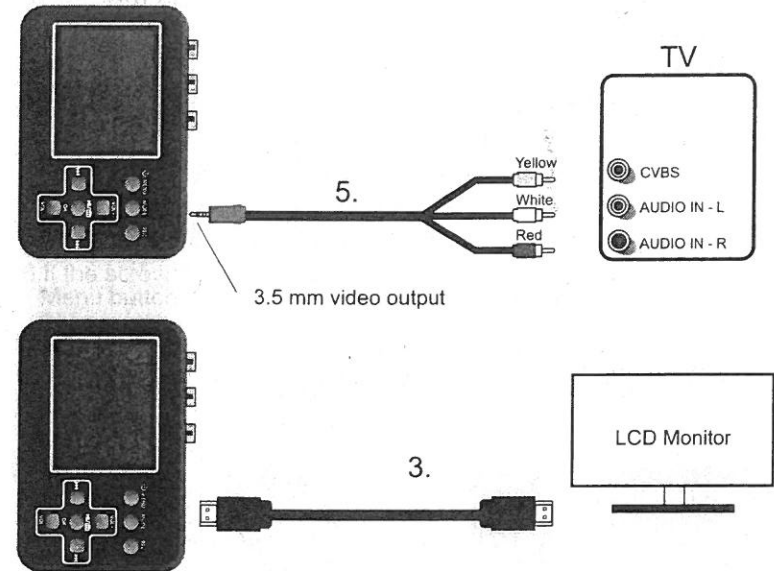

If you want to connect to the HDMI on your TV, use the accompanying HDMI (3).

 
Video Grabber now turns black and you will see the film on the TV screen instead.

Copying to a Computer

By connecting your Video Grabber to a computer, you can process your recorded films and images on the computer itself. A drive routine will automatically be installed onto your computer the first time you connect the device to your computer. Your Video Grabber then appears as a removable disc drive on the computer, so you can copy and rename, or delete your films.

How to copy your recordings onto your computer:

1. Start the Computer.
2. Connect your Video Grabber to the computer by using the USB cable.

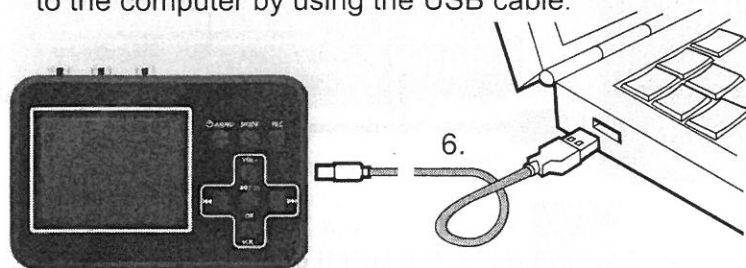

3. Your Video Grabber now appears as a removable disc drive on the computer.

N.B.! Do not playback video material while your Video Grabber is connected to the computer. This may damage both your computer and your Video Grabber.

Troubleshooting

1. Before pressing the REC button of the product, please make sure the input sources (DV, DVD player, VHS) is turned on and can provide audio or video signal to the product.
2. Make sure that the A/V cables are securely connected to both the input sources and the device.
3. If the product crashes, please use a needle to push the mini hole at the back of the product to reset the product.
4. Please use a TF card whose transfer speed is Class 10 or above.
5. If the Video Grabber's software seizes up, the system can be reset by inserting a pin or similar object into the small hole found on the back of the device.
6. If the screen remains black in spite you having pressed the On/Off Menu button for a protracted period, the battery may be dead. Connect the charger and try again.
7. If you do not succeed in recording video material to your Video Grabber, the cables may be incorrectly connected or be connect too loosely.

Screen Symbols



Memory card



Video recording mode



Film



Play mode



Available button alternatives



Exit

Press the **On/Off Menu** button to leave the setting mode.



Set

Press **OK** to save your selected setting.



Battery-charge indicator

www.digitnow.us